

how2run-DTMF_SEND_SS_ino.txt

HOW TO RUN DTMF_SEND_SS.ino example

a. Make a folder named DTMF_SEND_SS

b. copy and paste the code into a file named DTMF_SEND_SS.ino and save it into the previous created folder,

or,

copy the file DTMF_SEND_SS.ino into the previous created folder

c. download (**) the "a-gsmII/b-gsmgnss kickstart for Arduino (COMPILABLE) CODE - version 0.9711" from:

<https://itbrainpower.net/downloads#a-gsmII>

or

<https://itbrainpower.net/downloads#b-gsmgnss>

e. Expand (de-compress) the downloaded "a-gsmII/b-gsmgnss kickstart for Arduino".

f. Copy following files into the DTMF_SEND_SS folder:

"agsmII_basic_lbr.h", "agsmII_DTMF_lbr.ino" and "agsmII_basic_lbr.h",

"agsmII_DTMF_lbr.ino"

or,

"bgsmgnss_basic_lbr.h", "bgsmgnss_DTMF_lbr.ino" and "bgsmgnss_basic_lbr.h",

"bgsmgnss_DTMF_lbr.ino"

g. Open DTMF_SEND_SS.ino into the Arduino environment and edit

"destinationNumber" and other

variables found at lines 45==>49. Compile, upload. Enjoy!

ARDUINO Serial Monitor speed: 57600bps

** For "a-gsmII/b-gsmgnss kickstart for Arduino" download, your name, email address and the modem IMEI are required.

The modem IMEI can be found printed on the Quectel GSM module, or run AT+GMGS command.