

how2run-DTMF_SEND_SS_ino.txt

HOW TO RUN DTMF_SEND_SS.ino example

- a. Make a folder named DTMF_SEND_SS
- b. copy and paste the code into a file named DTMF_SEND_SS.ino and save it into the previous created folder,
or,
copy the file DTMF_SEND_SS.ino into the previous created folder
- c. download (**) the "a-gsmII/b-gsmgnss kickstart for Arduino (COMPILABLE) CODE - version 0.9711" from:
<https://itbrainpower.net/downloads#a-gsmII>
or
<https://itbrainpower.net/downloads#b-gsmgnss>
- e. Expand (de-compress) the downloaded "a-gsmII/b-gsmgnss kickstart for Arduino".
- f. Copy following files into the DTMF_SEND_SS folder:
"agsmII_basic_lbr.h", "agsmII_DTMF_lbr.ino" and "agsmII_basic_lbr.h",
"agsmII_DTMF_lbr.ino"
or,
"bgsmgnss_basic_lbr.h", "bgsmgnss_DTMF_lbr.ino" and "bgsmgnss_basic_lbr.h",
"bgsmgnss_DTMF_lbr.ino"
- g. Open DTMF_SEND_SS.ino into the Arduino environment and edit "destinationNumber" and other variables found at lines 45==>49. Compile, upload. Enjoy!

ARDUINO Serial Monitor speed: 57600bps

** For "a-gsmII/b-gsmgnss kickstart for Arduino" download, your name, email address and the modem IMEI are required.
The modem IMEI can be found printed on the Quectel GSM module, or run AT+GMGS command.