

how2run-SD_SS_ino.txt

HOW TO RUN SD_SS.ino example

- a. Make a folder named SD_SS
- b. copy and paste the code into a file named SD_SS.ino and save it into the previous created folder,
or,
copy the file SD_SS.ino into the previous created folder
- c. download (**) the "b-gsmgnss kickstart for Arduino (COMPILABLE) CODE - version 0.9711/2016.07.15" from:
<https://itbrainpower.net/downloads>
- e. Expand (de-compress) the downloaded "b-gsmgnss kickstart for Arduino".
- f. Copy following files into the SD_SS folder:
"bgsmsgnss_basic_lbr.h", "bgsmsgnss_FS_lbr.ino" and "bgsmsgnss_basic_lbr.ino",
"bgsmsgnss_FS_lbr.ino"
- g. Open SD_SS.ino into the Arduino environment edit the variable at lines 53.
Compile, upload. Enjoy!

ARDUINO Serial Monitor speed: 57600bps

** For "b-gsmgnss kickstart for Arduino" download, your name, email address and the modem IMEI are required.
The modem IMEI can be found printed on the Quectel GSM module, or run AT+GMGS command.