

how2run-gsm_UTILITIES_SS_ino.txt

HOW TO RUN gsm_UTILITIES_SS.ino example

- a. Make a folder named gsm_UTILITIES_SS
- b. copy and paste the code into a file named gsm_UTILITIES_SS.ino and save it into the previous created folder,
or,
copy the file gsm_UTILITIES_SS.ino into the previous created folder
- c. download (**) the "a-gsmII/b-gsmgnss kickstart for Arduino (COMPILABLE) CODE - version 0.9711" from:
<https://itbrainpower.net/downloads#a-gsmII>
or
<https://itbrainpower.net/downloads#b-gsmgnss>
- e. Expand (de-compress) the downloaded "a-gsmII/b-gsmgnss kickstart for Arduino".
- f. Copy following files into the gsm_UTILITIES_SS folder:
"agsmII_basic_lbr.h", "agsmII_SMS_lbr.ino"
or,
"bgsmgnss_basic_lbr.h", "bgsmgnss_SMS_lbr.ino"
- g. Open gsm_UTILITIES_SS.ino into the Arduino environment edit the "destinationNumber" at lines 52.
Compile, upload. Enjoy!

ARDUINO Serial Monitor speed: 57600bps

** For "a-gsmII/b-gsmgnss kickstart for Arduino" download, your name, email address and the modem IMEI are required.
The modem IMEI can be found printed on the Quectel GSM module, or run AT+GMGS command.